


BRUSH MONSTER

Smart Toothbrush for Kids



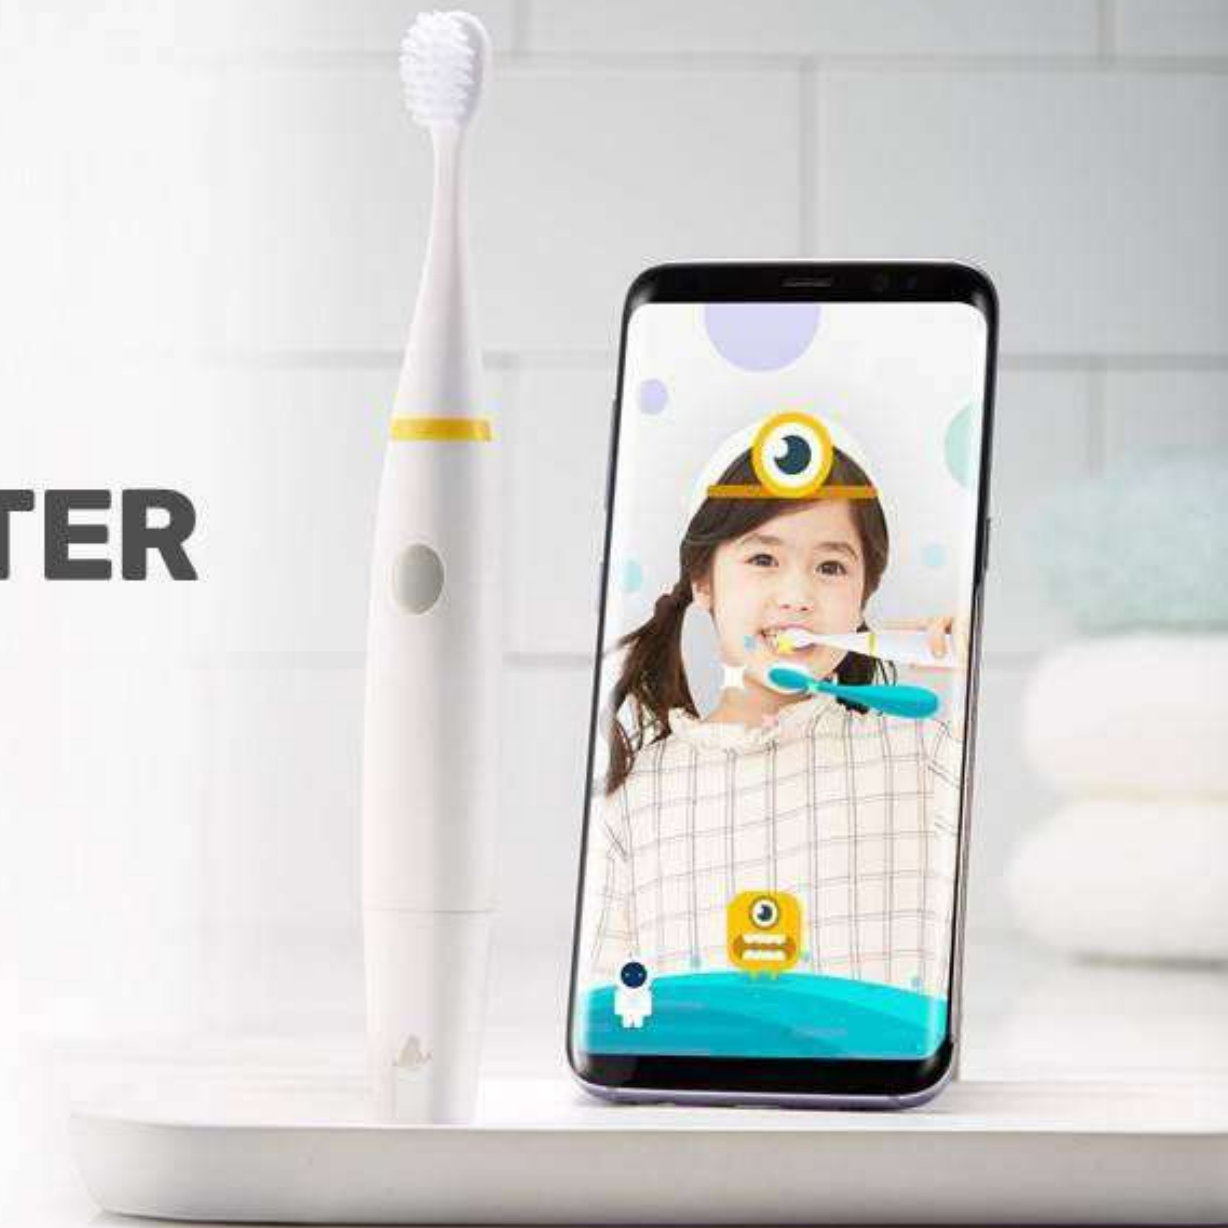

BRUSH MONSTER

The world's first AR(Augmented reality) electric toothbrush, 'Brush Monster'

"Watching" is the best way to learn how to brush. Kids can learn and practice the proper way to brush their teeth by following the AR brushing guide on their face which is displayed in the application.

While they brush the motion sensor tracks the exact location of the brush in the mouth.

The AR brushing guide leads kids to brush proper way.

Brushing Motion Sensor





Whole process of brushing

Squeezing
toothpaste



Brushing



Cleaning
tongue



Rinsing
mouth



Washing
brush



Washing
Cup



Brush Monster guides whole process of brushing from squeezing toothpaste to washing cup!



BRUSH MONSTER

Kids Smart Toothbrush

Dental Report



Built-in timer and sensor track real location of teeth and brushing time!
10sec per each section! Brushing for 160sec in total!



Control level of sonic vibration in application

Sonic vibration(Max): 16,000times / 1min

Level of sonic vibration: 4levels (super weak, weak, strong, super strong)



In App: Main - Setting - Level of vibration





BRUSH MONSTER

The world's safest electric toothbrush for kids Protect wrist of your kids

IPX7 waterproof

The lightest weight, 32g(without battery)

Suitable size for kids' mouth

DuPont™ anti-bacterial soft bristle nylon brush





BRUSH MONSTER

Fun to take selfie with cutie characters after brushing!

Collect various character packs every weeks!
Parents can check the number of brushing a day by the number of stars on character collection book.
New character pack is updated regularly.

Character Collection Book





BRUSH MONSTER

Brush Monster free application



We offer brushing guide application "Brush Monster" for free.

Download "Brush Monster" from App Store/Google Play Store.

Keep leading our kids' interest by regular update.

Currently we only offer English and Korean. But we will offer more various languages.





Specification





BRUSH MONSTER

Specification



Product Name	Brush Monster Electric Tooth Brush
Model No.	BMT100
Certification	KC, CE, FCC, RoHS
Color	White
Sonic vibration(Max)	16,000times/1min
Level of sonic vibration	4levels (off- 1-2-3-4) *Control in the application
Dimension	177 x 24 x 21 mm
Net weight(g)	32g (exclude battery)
Power	Battery (AAA) 1piece
Components	Body 1ea, Brush 1ea, Battery 1ea, Manual
Waterproof	IPX 7
Bluetooth version	Bluetooth 4.2 2.4GHz
Operating temperature	5~45℃
Operating humidity	5~100%
OS compatibility	Android 4.3 and later/ IOS 9.0 and later

